
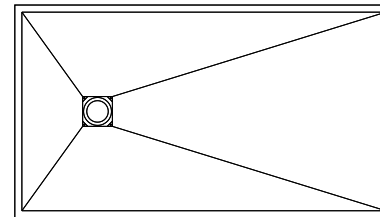
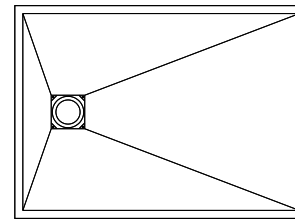



SMC STONE SHOWR TRAY

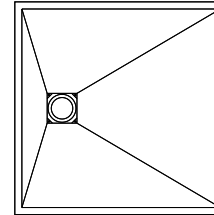

EN - AFTER CARE INSTRUCTIONS

Regularly clean your shower product with warm soap water to prevent lime scale build up. Do not use abrasive cleaning fluids or materials or strong chemical cleaners as this will damage the product surface. Clean the plastic parts with a cloth and mild detergent. Never use any abrasive creams, solvents, acetone or detergents. No liability for any type of use or care other than those contained in these instructions.



1

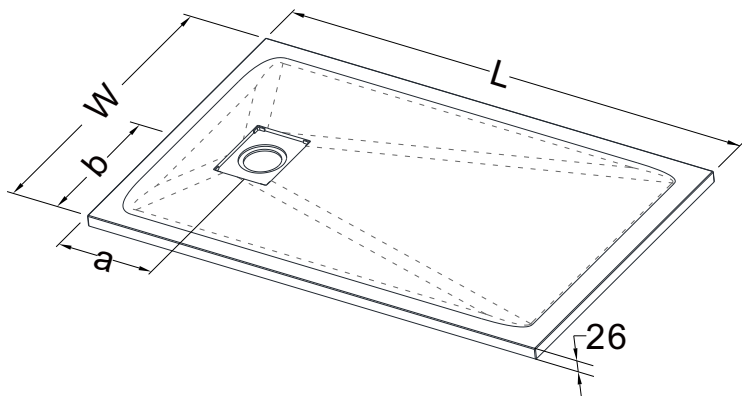

MODEL (Size)	Size (mm)			
	L	W	a	b
8090	800	800	200	400
9090	900	900	200	450


MODEL (Size)			Size (mm)			
			L	W	a	b
9070	9080	9090	900	700	200	350
10070	10080	10090	1000			
11070	11080	11090	1100			
12070	12080	12090	1200	800	350	400
14070	14080	14090	1400			
15070	15080	15090	1500			
16070	16080	16090	1600	900		450
17070	17080	17090	1700			
18070	18080	18090	1800			

2

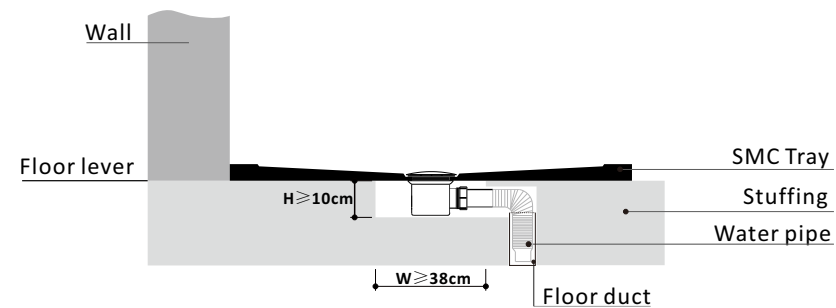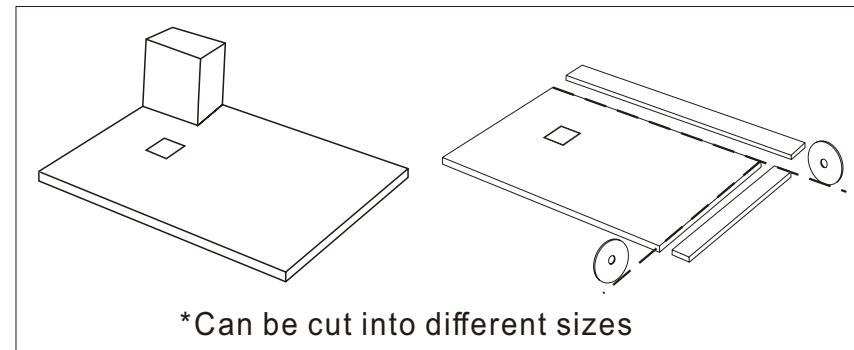

Plan1 Above ground installation

Plan2 Flushbonading

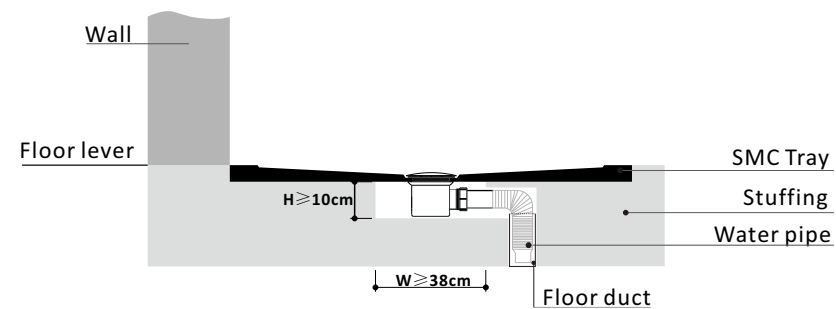

3

